

INSTALLATION INSTRUCTIONS

INSTALLING PERIBACK AT STOREFRONT JAMBS:

- 1) Cut PeriBack slightly shorter than the rough opening.
- 2) Notch the bottom of PeriBack at the bottom approximately 3" (use slit in PeriBack as your guide) removing the interior portion so it will slide over the end dam in the sill flashing.
- 3) Install PeriBack placing storefront jamb into prefabricated slits. **(See Photo #1)**. Center PeriBack onto the jamb so the reveal is the same at the interior and exterior.
- 4) When installing the jamb in the field, wrap the notched area at the bottom of PeriBack over the end dam to ensure PeriBack is on the exterior of the end dam.
- 5) Apply sealant per manufacturers' installation instructions.



Photo # 1

INSTALLING PERIBACK WITH ADHESIVE AT SILL FLASHING, HEAD COMPENSATION CHANNEL and CURTAIN WALL PERIMETER MEMBERS:

- 1) Cut PeriBack length of sill flashing or head comp channel. For curtain wall jambs cut PeriBack slightly shorter than rough opening.
- 2) PeriBack suggests notching where the shim packs and anchors will be placed. Even though this is not necessary this will provide a guide/placement for the shim pack. **See Photo #2**
- 3) Once in the field, wipe aluminum members with 70% isoprenaline alcohol or similar product, and let dry. Remove the paper protectant from the back side of the PeriBack, center the PeriBack on aluminum, and press in place. **See Photo #3**

PERIBACK

- 4) Install sealant per manufacturer's installation instructions.




Photo # 2



Jamb and sill flashing joint



Photo # 3

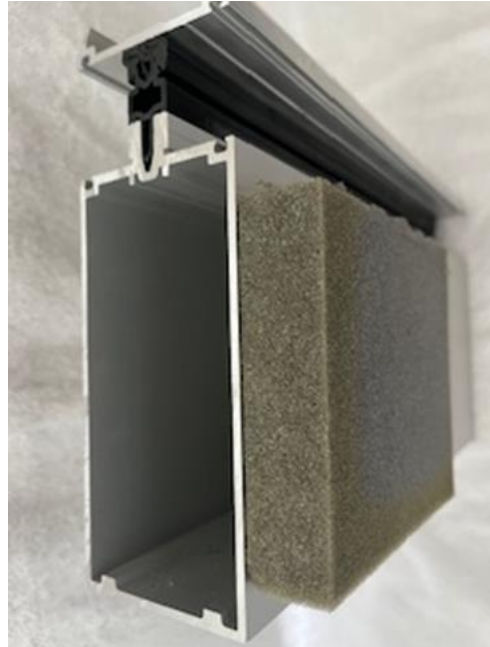

PeriBack suggests using an electric or battery-operated knife for cutting and notching. Hot knives work but generate fumes that may be **hazardous** to your health.

